



YD-V16 Bluetooth® Rearview Mirror Speakerphone
User Manual

www.letsyada.com

WINPLUS

Thank you for purchasing the hands-free Bluetooth® Speakerphone, the latest wireless technology product from Winplus. We hope you will enjoy all the features and benefits offered by the YD-V16 Bluetooth® Rearview Mirror Speakerphone. These features and benefits were designed with the goal of making wireless communication more convenient for the user.

Winplus USA

820 South Wanamaker Avenue,
Ontario, CA 91761

info@winplususa.com
www.winplususa.com

Winplus Australia

Unit 2, 991 Mountain Hwy Boronia,
Victoria, Australia, 3155

customercare@winplus.com.au
www.winplus.com.au

Winplus Europe

Unit 4, Two Counties Estate, Falconer Road,
Haverhill, Suffolk CB9 7XZ, U.K.

info@winplus-europe.com
www.winplus.net

Winplus New Zealand

Griffiths Equipment
22-24 Olive Road, Penrose,

Auckland, New Zealand
web@griffiths.co.nz
www.types.co.nz

Winplus Asia

Suites 6-11, 7th Floor, Corporation Park,
11 On Lai Street, Shatin, N.T., Hong Kong

info@winplus.net
www.winplus.net

YD-V16 Speakerphone Specifications:

- Frequency Range: 2.402 MHz~2.480 MHz
- Battery: Li-ion 3.7V 1700mAH
- Mic. Sensitivity: -60 +/-2dB
- Speaker: 8 ohm/1W
- Input Voltage: 4.0 V
- Working Current: 100 mA
- Standby Current: 3.5 mA
- Talk time: Up to 25 hours
- Standby time: Up to 650 hours
- Operating Temperature: -10°C to 50°C
- Storage Temperature: -20°C to 60°C
- Phonebook capacity: 600 Entries
- Echo cancellation and noise reduction
- Microphone Gain Control
- Digital Volume Control
- Screen Contrast Adjustable
- Software Upgradable

CONTENTS

DISCLAIMER
WARRANTY / LIABILITIES
PACKAGE CONTENT
INSTALLATION
BATTERY OPERATIONS
SPEAKERPHONE OPERATIONS
BUTTON FUNCTIONS
LCD DISPLAY INDICATION
LED INDICATION
CARE AND MAINTENANCE
TROUBLE SHOOTING
CUSTOMER SERVICE / CONTACT US PAGE
FCC/ICC

DISCLAIMER

- Distracted driving is dangerous. Always use the Bluetooth® Device in a manner that does not reduce your attention and ability to drive carefully and safely.
- Adhere to all applicable traffic laws and motor vehicle regulations applicable to the device.
- Consult local laws and regulations for any restrictions on installation or use.
- Do not install on or near an airbag. Such installation could interfere with airbag deployment or could cause the product or another object to become a projectile, which could result in serious personal injury to occupants.
- Ensure the product location will not obstruct your vision while driving.
- Turn off the device prior to boarding an aircraft.
- Small parts may be a choking hazard. Do not allow children to play with the device.
- Observe all signs that require an electrical device to be switched off in designated areas. These may include hospitals, blasting areas or potentially explosive atmospheres.

WARRANTY / LIABILITIES

WINPLUS NORTH AMERICA

LIMITED WARRANTY

WINPLUS North America warrants, to the original purchaser, that its products are free from defects in material and workmanship for 90 days from the date of original purchase. Where permitted by law, WINPLUS North America's liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and WINPLUS North America makes no other warranty of any kind aside from the limited express warranty stated above.

Note: Warranty only applies for North American customers or purchases made in the North America.

CONDITIONS OF WARRANTY

If during the 90 day warranty period your new product is found to be defective, WINPLUS North America will repair such defect, or replace the product, without charge for parts or labor subject to the following conditions:

1. All repairs must be performed by WINPLUS North America.
2. All warranty claims must be accompanied by a copy of the sales receipt or bill of sale.
3. The equipment must not have been altered or damaged through negligence, accident, improper operation, or failure to follow the product instructions for installation, use, or care.
4. The replacement of parts is excluded from the warranty when replacement is necessary due to normal wear and tear.
5. Repair or replacement parts supplied by WINPLUS North America under this warranty are protected only for the unexpired portion of the original warranty.
6. This is a "repair or replace" warranty only, and does not cover the costs incurred for the installation, removal or reinstallation of the product, or damage to any mobile phone device or vehicle.

OWNER'S RESPONSIBILITIES:

WINPLUS North America will make every effort to provide warranty service within a reasonable period of time. SHOULD YOU HAVE ANY QUESTIONS ABOUT SERVICE RECEIVED OR IF YOU WOULD LIKE ASSISTANCE IN OBTAINING SERVICE, PLEASE CALL TOLL FREE 1.866.294.9244 DURING REGULAR BUSINESS HOURS MONDAY THROUGH FRIDAY 9:00 AM TO 5:00PM.

In order to provide you with the proper warranty service, we request that you adhere to the following procedure:

1. Include a copy of your sales receipt or bill of sale with your unit when it is returned for warranty service.

2. If it is necessary to return your product for service, please return it securely packed, preferably in the original shipping box, and freight and insurance prepaid to the following address:
ATTN: WINPLUS BLUETOOTH® PRODUCTS RETURNS
820 South Wanamaker Avenue,
Ontario, CA 91761
3. Please include a detailed explanation of the problem you are having.
4. If your product is found by WINPLUS North America to have a defect in material or workmanship, within the warranty period, it will be repaired or replaced at no charge and returned to you prepaid.

WINPLUS North America makes no other warranty of any kind aside from the limited express warranty stated herein.

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE YD-V16 SPEAKERPHONE. EXCEPT AS EXPRESSLY SET FORTH HEREIN, WINPLUS NORTH AMERICA AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

WINPLUS North America and/or its affiliates are not responsible for a user's intended or actual use of the YD-V16 Speakerphone. In no event shall WINPLUS North America and/or its affiliates have any liability for any losses (whether direct or indirect, in contract, tort or otherwise) incurred in connection with the YD-V16 Speakerphone. Neither shall WINPLUS North America and/or its affiliates have any liability for any decision, action or inaction taken by any person in reliance on the YD-V16 Speakerphone, or for any delays, inaccuracies and/or errors in connection with the YD-V16 Speakerphone and its functioning.

WINPLUS North America and/or its affiliates shall have no responsibility or liability for damage and/or injury resulting from accidents while user is utilizing the YD-V16 Speakerphone; and WINPLUS North America and/or its affiliates, the manufacturer, distributor and seller shall not be liable for any injury, loss or damage, incidental or consequential, arising out of the use or intended use of the product.

WINPLUS EUROPE **LIMITED WARRANTY**

WINPLUS warrants, to the original purchaser, that its products are free from defects in material and workmanship for 12 months from the date of original purchase. Where permitted by law, WINPLUS liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and WINPLUS makes no other warranty of any kind aside from the limited express warranty stated above.

OWNER'S RESPONSIBILITIES:

In order to provide you with the proper warranty service, we request that you adhere to the following procedure:

1. Include a copy of your sales receipt or bill of sale with your unit when it is returned for warranty service.
2. If it is necessary to return your product for service, please return it securely packed, preferably in the original shipping box, and freight and insurance prepaid to the following address:
ATTN: WINPLUS BLUETOOTH® PRODUCTS RETURNS
Unit 4, Two Counties Estate, Falconer Road
Haverhill, Suffolk CB9 7XZ, UK
3. Please include a detailed explanation of the problem you are having.
4. If your product is found by WINPLUS to have a defect in material or workmanship, within the warranty period, it will be repaired or replaced at no charge and returned to you prepaid.

WINPLUS makes no other warranty of any kind aside from the limited express warranty stated herein.

WINPLUS AUSTRALIA / HONG KONG

LIMITED WARRANTY

This Yada product is warranted against faulty workmanship for a period of 2 years from date of purchase. Liability is limited to replacement of the product and claims for associated or consequential loss or damage will not be accepted. Warranty is void and does not apply if the product has been damaged or rendered faulty by accident, abuse, misuse, incorrect application or if the product has been modified or tampered with. Proof of purchase is required to validate warranty claims. If this product is faulty, simply return it to the place of purchase with your receipt for a replacement product. No refunds or credits will be issued. Replacement is limited to a Yada product of the same or similar model.

PACKAGE CONTENT



Bluetooth® Rearview Mirror Speakerphone

 


Car Charger




Velcro Straps

INSTALLATION

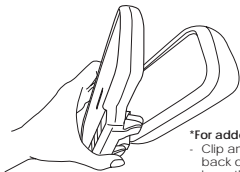

***For added safety, use Velcro straps**

 - Clip and attach the Velcro clips to the back of the mirror (see above image)
- Loop the straps around the vehicle rearview mirror
- Press Velcro straps together to secure

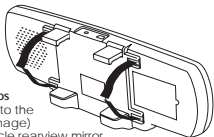

- Pull the tension clamp and clip to the existing rearview mirror
 - Push the speakerphone until it is flushed against original rearview mirror
- ⚠ Warning:** Do not pull or remove the rearview mirror without pulling apart the tension clamp.

BATTERY OPERATIONS

⚠ IMPORTANT: Before using the YD-V16 Bluetooth® Rearview Mirror Speakerphone:

- Fully charge the battery (8 hours continuous) for first time use
- Only use rechargeable batteries provided

A. Charging the Battery

Follow the steps below when charging the YD-V16 Bluetooth® Speakerphone:

- Connect the DC power jack to the YD-V16 Bluetooth® Speakerphone
- Connect car charger to cigarette power outlet
- LED will flash red when charging is initiated
- Red LED will flash off when charging is complete

⚠ IMPORTANT: Remove device from cigarette outlet before leaving the vehicle. Do not leave the YD-V16 Bluetooth® Rearview Mirror Speakerphone charging in the vehicle unattended.

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

NOTE: Actual talk time and standby time for the YD-V16 will vary with different Bluetooth® enabled mobile phones due to different implementation of power down modes.

B. Low Battery Power Indicator

 
When battery power is low, the device will:

- Flash red LED light

Recharge the YD-V16 immediately after the low battery indicators are detected. The LED light will not turn on indicating battery power is completely consumed. Follow "Charging the Battery" instructions above to recharge the YD-V16.



The YD-V16 will not power on until it is connected to a power outlet to recharge. Recharge the YD-V16 sufficiently before using.

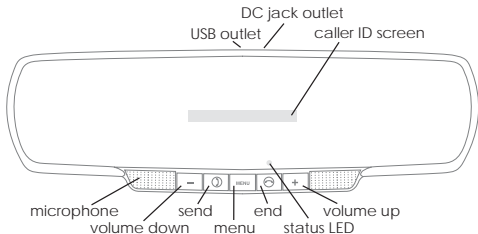
SPEAKERPHONE OPERATIONS



A. Power on/off

To turn the YD-V16 on:

 - Press and hold  until the LED flashes blue
- Release the button and wait for YD-V16 to enter search mode **Searching**
- Device will stay in search mode for 5 seconds
- If no device was found, **YD-V16** will stay on the screen
- To search again, press  once to activate search mode **Searching**



NOTE: Before automatic connection, please make sure Bluetooth® mode on your mobile phone is activated and you must have successfully paired and connected to YD-V16 at least once in order to activate this feature.

To turn the YD-V16 off:

- Press and hold  for at least 5 seconds

B. Pairing/Linking

Pairing Bluetooth® enabled devices like mobile phones with the YD-V16 Bluetooth® Rearview Mirror Speakerphone authorizes the devices to work with each. This step only needs to be performed once.

Before Pairing the YD-V16 Bluetooth® Speakerphone:

- Ensure the YD-V16 is fully charged
- Charging cable is disconnected
- You have the pairing instruction of your Bluetooth® wireless phone

It is recommended that you follow the pairing instructions provided by your mobile phone to ensure you successfully pair the YD-V16 Speakerphone with your mobile phone. If you do not have your mobile phone's instruction manual available, follow the typical pairing instructions below:

- Power on the YD-V16 and wait until device completed the search mode
- Press and hold **MENU** for 2 seconds
- Screen will indicate **Pair Mode**
- Turn on your mobile phone
- Select SET-UP or CONNECT from your mobile phone menu
- Find and select OPTION to discover Bluetooth® devices, establishing a connection may take several minutes
- If found, phone display should indicate "YD-V16" or
Select "YD-V16" from the list
- Phone should give you a prompt asking if you want to pair the device
- Select OK or ACCEPT and wait for prompt to enter passkey or PIN
- Enter the code **0000** when a passkey is requested
- Select "OK" to pair the YD-V16 and the handset
- When pairing is complete, the YD-V16's LCD will show **Pair OK**

NOTE: If the YD-V16 and mobile handset did not successfully pair, follow the steps below to retry pairing:

- Turn the phone off & wait for 10 seconds
- Turn phone power on
- Repeat the pairing instructions from the beginning

To Link YD-V16 to your mobile phone after pairing:

- Pressing **1** of your YD-V16 or
- Establishing the connection via your mobile phone

NOTE: Make sure Bluetooth® has been activated on your mobile phone before you press **1**. (Please refer to your mobile's operation manual about connecting Bluetooth® devices)

Once it is connected:

- YD-V16 will emit a beep
- The mobile's ID will be displayed on the screen (Ex. **Motorola V3**)

C. Phonebook

AT Command and OPP (Object Push Profile) function can automatically transfer the contacts in your mobile phone to the YD-V16 Rearview Mirror Speakerphone.

NOTE: Not all mobile phones support OPP or AT Command features

Phonebook Set-up via AT Command

To transfer the Phonebook from your mobile phone via AT Command:

- Make sure the YD-V16 and mobile phone is connected
- Press **Menu**
- Scroll the menu by pressing **+** or **-** until you see **Contact list**
- Press **Menu** to enter Phonebook Transfer Inquire
- Press **1** to start or press **0** to end
- LCD will display **Downloading...** to indicate Phonebook transfer is in process
- Once transfer is successful, LCD will display **Download Complete**

Phonebook Set-up via OPP

The YD-V16 supports single contact or group contacts transfer via OPP function. For details on operating procedures, please refer to your mobile phone's user manual

To transfer the Phonebook from your mobile phone via OPP:

- Disconnect Bluetooth® link from the YD-V16 setting (if it is connected)
- Setup mobile phone for copying and transferring the contacts from the mobile phone to your YD-V16

NOTE: Please refer to your mobile phone's user manual

- LCD will display **Downloading...** to indicate contacts transfer is in process
- Once transfer is completed, LCD will show number of records transferred
- Reconnect the Bluetooth® link of your YD-V16 and mobile phone

NOTE: Some mobile phones are able to register multiple phone numbers under the same name. The YD-V16 phonebook can distinguish the numbers using the letters: "M" for mobile phone number, "H" for home number and "O" for office number

Deleting Phonebook entries

To delete Phonebook entry:

- Press **Menu**
- Scroll the menu by pressing **+** or **-** until you see **Delete Contact**
- Press **↻**

- LCD will display **Yes or No?**
- Press **⏏** to confirm
- LCD will display **Deleting Contact** while phone book entries are being deleted
- LCD will display **Deleted All!** when phone book is cleared

NOTE: YD-V16 does not allow deleting of a single entry, ALL entries will be deleted after confirmation

Speed Dial Set-up

NOTE: Phonebook should be set up first to activate speed dialing.

To set up speed dialing:

- Press **Menu**
- Scroll the menu by pressing **+** or **-** until you see **Quick Dial**
- Press **⏏**
- Browse for an empty memory slot by pressing **+** or **-**. There are a total of 3 memory slots for speed dialing with each slot represented by the "+", "-", and "Menu"
- Press **Menu** after finding an empty slot
- Browse the phone number that you wish to set to speed dial
- Press **⏏** to confirm
- Press **⏪** to return to Main Menu

NOTE: If a memory slot is empty, user can simply press the key of that slot for 2 seconds at the main page, then browse the phone number that you wish to set to speed dial of that slot.

To modify/delete speed dialing number:


Once you have saved a number for a slot/button, you need to delete it before you can save a new number for that slot/button.

To delete a number in a speed dialing entry:

- Press **Menu**
- Scroll the menu by pressing **+** or **-** until you see **Quick Dial**
- Search for the entry that you would like to modify
- Press **Menu** twice and the screen will show **Delete ?**
- Press **OK** to confirm or **Cancel** to cancel

D. LCD Display

To adjust contrast of LCD Display:



- Press **Menu**
- Scroll the menu by pressing **+** or **-** until you see **Contrast Setting**
- Press **OK**
- The status bar is shown in the contrast menu. This indicates the contrast level of the LCD display 
- Press **+** or **-** to adjust to desired contrast level
- Press **OK** to save setting

E. Volume Adjustments



To adjust ring volume:

- Press  or  to adjust ring volume 

To adjust call volume during a call:

- Press  or  to adjust the volume during a call

To adjust microphone volume during a call:

- Press and hold  for 2 seconds to increase microphone volume
- Press and hold  for 2 seconds to decrease microphone volume

If you cannot hear the person you are talking to on the other line, do the following steps while conversation is in progress:

- Adjust the microphone volume of the YD-V16 to maximum level or
- Request the person on the other line to adjust his/her mobile phone's volume level to maximum

If there is a strong echo when the person on the other line talks:

- Transfer the call to your mobile phone
- If echo disappeared, transfer the call to your YD-V16 again and lower the loud speaker volume until echo is reduced/eliminated
- If the echo remains, the problem might be with the network provider or the mobile phone itself.

If the loudspeaker volume of the YD-V16 is too low or too high and you are unable to adjust it:

- Adjust the volume directly on the mobile phone
- Fine tune it using the volume control of the YD-V16

Mute/Un-mute Functions

To mute the YD-V16 during an active call:

- Press **Menu** for 2 seconds

To cancel mute:

- Press **Menu** again

F. Call Operations

Making a Call

To make a call using the phonebook:

- Press **Menu**
- Press **+** or **-** until you see **Contact list**
- Press **↻**
- Select Index by pressing **+** or **-**
- Press **↻**
- Select Contact by pressing **+** or **-**
- Press **↻** again to dial

Last Number Re-dial:


- Press **↻**
- Press **+** or **-** until you find the desired last dialed number
- Press **↻** again to dial


To make a call using the Speed Dial function:

- Press and hold **Menu**, **+** or **-** for 2 seconds
- Phone will automatically dial the number set to Speed Dial for that particular button

To make a call using the Voice Dial function:

To enter voice dialing mode:


- Hold  for 2 seconds
- Say the name after you hear the tone

NOTE: If the YD-V16 failed to recognize the voice/name. Press  to exit and repeat the above steps for voice dialing.


NOTE: Voice Dialing is a feature of your mobile phone. Please refer to your phone's user manual for voice command operation.

Answering Calls

To answer calls via the YD-V16:

- Press  when ring tone is heard or
- Answer the call via the mobile handset

To end a call:

- Press  or
- End call using the mobile handset

To reject a call:

- Press  when ring tone is heard

Caller ID Display

NOTE: Caller ID Display is a network service, please consult your network provider for details.

Caller ID can be displayed in 3 ways:

a) By Name

YD-V16 can display the caller's name when receiving call. To display caller's name, the name must be stored in the phonebook

b) By Phone Number

Phone number will be displayed if there is no record of that number in the phonebook

c) Withheld Number

When a caller withholds his number, **WITHHELD** will be displayed

NOTE: The YD-V16 do not automatically save numbers dialed directly from your mobile phone and will not be displayed.

Call Waiting

NOTE: Call Waiting is a network service, please consult your network provider for details.

To accept an incoming call during a conversation:

- Press  and the phone will automatically switch to Line 2

To switch calls between the two lines:

- Press  to switch between lines

Interchanging YD-V16 and Handset





You may interchange the call between your handset and YD-V16 while conversation is ongoing

To shift from YD-V16 to handset or vice versa:








- Press and hold  for 2 seconds

BUTTON FUNCTIONS

Button	Function	Operation
Menu	Go to Menu	Press 1 time
	DTMF (Dial Tone Modulation Frequency)	Activated only when the line is connected
	CONTACT LIST	Transfer phonebook contacts from mobile phone and SIM to YD-V16 via AT or OPP command
	CONTRAST SETTING	Adjust LCD Contrast
	DISCONNECT BT	Disconnect Bluetooth®
	QUICK DIAL	With 3 memory slots for quick dialing
	DELETE CONTACT	Delete entire phonebook content
	Pairing	Press and hold for 2 seconds (Screen shows "Pair Mode")
	Delete a number saved in Quick Dial	Press twice (screen will show "DELETE?")
	Mute	Press and hold for 2 seconds
Un-mute	Press 1 time	

Button	Function	Operation
	Make / Receive call	Press 1 time
	Voice dialing	Press and hold for 2 seconds to enter voice dialing mode
	Conversation transfer	While conversation is ongoing, press and hold for 2 seconds
	Bluetooth® link connection	Press 1 time after pairing
	YES	Press 1 time
	End Call	Press 1 time
	Reject Call	Press 1 time
	No	Press 1 time
	Increase Volume	Press repeatedly until you reach desired volume level
	Scroll Upward	Press repeatedly until you find desired entry/menu item
	Move left	Press repeatedly until you find desired entry/menu item
	Increase Microphone Gain	Press and hold for 2 seconds
	Decrease Volume	Press repeatedly until you reach desired volume level
	Scroll downward	Press repeatedly until you find desired entry/menu item
	Move right	Press repeatedly until you find desired entry/menu item
	Decrease Microphone Gain	Press and hold for 2 seconds

LCD DISPLAY INDICATION

LCD Display	Indication
YD-V16	Welcome Screen
Pair Mode	Bluetooth® Pairing Mode
Pair OK	Bluetooth® Pairing Successful
Searching	Blinking to indicate Bluetooth® Search Mode
YD-V16	Bluetooth® Disconnected
NAME	Outgoing Call
NAME	Incoming Call
1 Missed Call	Missed Call
 Contact list 	Menu
	Reception Signal Strength Indicator (for mobile phone only)
	Call transfer to mobile during a call
	Voice Dialing
	Call Register (Outgoing Call/Incoming Call/Missed Call)
Volume 	Volume Indicator
Download Contact?	AT Command Inquire
Downloading...	AT Command Phone Book Transfer in Process
Download Complete	AT Command Phone Book Transfer Finished
Downloading 1	OPP Phone Book Transfer in Process

LED INDICATION

LED Light	Status	Indication
RED Light	Steady	Battery charging in progress
	Blinking (every 5 seconds)	Battery low; recharging is recommended
BLUE Light	Blinking (every 30 seconds)	Unit is powered on

CARE AND MAINTENANCE

- Turn off the YD-V16 when not in use
- Attach the YD-V16 carefully and firmly to your rearview mirror (Please refer to instructions on how to attach the YD-V16 to your rearview mirror)
- Do not let the YD-V16 be in contact with liquid as it is not waterproof. Avoid putting it in places where there is excessive moisture and humidity.
- Do not expose the YD-V16 to direct sunlight or place in areas with high temperature, as it may result in an explosion
- If the YD-V16 is not in use for a prolonged period, store in a cool, dry place, free from moisture, humidity and dust
- Do not use abrasive cleaning solvents to clean the YD-V16
- Do not expose the YD-V16 to contact with sharp objects as this will cause scratching and damage
- Do not stick anything inside the YD-V16 as this may damage internal components
- Do not attempt to disassemble the YD-V16, as it does not contain serviceable components
- Only use the manufacturer supplied charger when charging the YD-V16
- Only charge the YD-V16's built-in battery in accordance with the instructions of this user guide

- Do not disassemble the charger as it may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the YD-V16 is subsequently used
- Do not use the charger outdoors or in damp areas
- Avoid charging the YD-V16 in extremely high or low temperatures
- It is recommended to charge the YD-V16 immediately whenever low battery power is encountered to prolong durability & standby time

TROUBLE SHOOTING

If you are unable to pair your mobile phone with the YD-V16:

- Make sure the battery is fully charged
- Turn off the YD-V16 and turn it on again
- Turn off all other Bluetooth® devices before you start pairing
- Ensure your mobile handset's Bluetooth® feature is activated. Please refer to your mobile handset user guide for specific instructions
- Repeat pairing procedures
- Ensure the YD-V16 is within a maximum of 10 meters of your mobile handset(s) or Bluetooth® enabled device and there are no obstructions, such as wall or other electronic devices, in between as it may cause interference transmission
- If all the above steps do not resolve your problem, please remove the battery for at least 20 minutes

The YD-V16 Rearview Mirror Speakerphone is compliant with and adopts the Bluetooth® Specification V2.0. However, interoperability between the device and other Bluetooth®-enabled products is not guaranteed because it depends on compatibility. For more information on the compatibility between the device and other Bluetooth®-enabled products, please contact Customer Service.

If the LCD display hanged or all button functions disabled:

- Use the RESET switch at the back of the unit

CUSTOMER SERVICE / CONTACT US

For questions or issues regarding the product, please visit www.letsyada.com or contact Winplus in your area/region to speak to our customer service representative:

Winplus USA

Tel. 866-294-9244

Tel. 310-638-0588

Winplus Europe

Tel. 44-1440-713888

Winplus Australia

Tel. 61-3-9720-4143

Winplus New Zealand

Tel. 64-9-5254575

Winplus Asia

Tel. 852-2798-8932

You can also contact us online by visiting www.winplus.com for more information about the product.

IF YOU ARE EXPERIENCING ANY ISSUES WITH THE PRODUCT DURING OPERATION, DO NOT RETURN THE PRODUCT TO THE STORE. CONTACT WINPLUS DIRECTLY FOR INSTRUCTIONS ON HOW TO RETURN/EXCHANGE THE PRODUCT.

FCC/ICC

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

To comply with FCC RF exposure requirements, the device and the antenna for this device must be installed to ensure a minimum separation distance of 20cm or more from a person's body. Other operating configurations should be avoided.

IC statement

Operation is subject to the following two conditions:

- 1) This device may not cause interference and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device has been designed to operate with an antenna having a maximum gain of 0 dBi. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



WINPLUS

NORTH AMERICA	820 South Wanamaker Avenue Ontario, CA 91761	Tel: 310-638-0588 Fax: 310-496-2740
EUROPE	Unit 4, Two Counties Estate, Falconer Road, Haverhill, Suffolk CB9 7XZ, U.K.	Tel: 44-1440-713888 Fax: 44-1440-713889
AUSTRALIA	Unit 2, 991 Mountain Hwy Boronia, Victoria, Australia, 3155	Tel: 61-3-9720-4143 Fax: 61-3-9720-4165
NEW ZEALAND	22-24 Olive Road, Penrose, Auckland, New Zealand	Tel: 64-9-5254575 Fax: 64-9-5256817
ASIA	Suites 6-11, 7th Floor, Corporation Park, 11 On Lai Street, Shatin, N.T., Hong Kong	Tel: 852-2798-8932 Fax: 852-2795-0241

© 2009 Winplus North America Inc. All Rights Reserved. Winplus, the logo design, and yada are trademarks or registered trademarks of Winplus North America Inc. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Winplus North America Inc. is under license.