



YD-V2 speakerphone + LCD caller display
User Manual

www.letsyada.com

WINPLUS

Thank you for purchasing the hands-free Bluetooth® Speakerphone, the latest wireless technology product from Winplus. We hope you will enjoy all the features and benefits offered by the YD-V2 Speakerphone with LCD caller display. These features and benefits were designed with the goal of making wireless communication more convenient for the user.

Winplus USA

820 South Wanamaker Avenue,
Ontario, CA 91761

info@winplususa.com
www.winplususa.com

Winplus Europe

Unit 4, Two Counties Estate, Falconer Road,
Haverhill, Suffolk CB9 7XZ, U.K.

info@winplus-europe.com
www.winplus.net

Winplus Asia

Suites 6-11, 7th Floor, Corporation Park,
11 On Lai Street, Shatin, N.T., Hong Kong

info@winplus.net
www.winplus.net

Winplus Australia

Unit 2, 991 Mountain Hwy Boronia,
Victoria, Australia, 3155

customercare@winplus.com.au
www.winplus.com.au

Winplus New Zealand

Griffiths Equipment
22-24 Olive Road, Penrose,

Auckland, New Zealand
web@griffiths.co.nz
www.types.co.nz

YD-V2 Speakerphone Specifications:

- Talk Time: 10 Hours
- Standby Time: 250 Hours
- Bluetooth® Chip/Class:
CSR chip Bluecore 3-MM / Class II
- Profiles Support: HSP, HFP
- Feature: Full Duplex
- Operating Range: 10 Meters
- Battery: 3 AAA 900mAh
- Input Voltage: 12-24 VDC
- Output Voltage: 5 VDC, 1A
- Clear Voice Quality:
16 level volume controls
- Operating Temperature: -20°C to 60°C

CONTENTS

DISCLAIMER

WARRANTY / LIABILITIES

PACKAGE CONTENT

SPEAKERPHONE VISOR CLIP INSTALLATION

BATTERY OPERATIONS

SPEAKERPHONE OPERATIONS

LCD DISPLAY OPERATIONS

VOICE OVER INTERNET PROTOCOL (VOIP) APPLICATION

CUSTOMER SERVICE / CONTACT US PAGE

FCC / ICC

DISCLAIMER

- Distracted driving is dangerous. Always use the Bluetooth® Device in a manner that does not reduce your attention and ability to drive carefully and safely.
- Adhere to all applicable traffic laws and motor vehicle regulations applicable to the device.
- Consult local laws and regulations for any restrictions on installation or use.
- Do not install on or near an airbag. Such installation could interfere with airbag deployment or could cause the product or another object to become a projectile, which could result in serious personal injury to occupants.
- Ensure the product location will not obstruct your vision while driving.
- Turn off the device prior to boarding an aircraft.
- Small parts may be a choking hazard. Do not allow children to play with the device.
- Observe all signs that require an electrical device to be switched off in designated areas. These may include hospitals, blasting areas or potentially explosive atmospheres.

WARRANTY / LIABILITIES

WINPLUS NORTH AMERICA **LIMITED WARRANTY**

WINPLUS North America warrants, to the original purchaser, that its products are free from defects in material and workmanship for 90 days from the date of original purchase. Where permitted by law, WINPLUS North America's liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and WINPLUS North America makes no other warranty of any kind aside from the limited express warranty stated above.

Note: Warranty only applies for North American customers or purchases made in the North America.

CONDITIONS OF WARRANTY

If during the 90 day warranty period your new product is found to be defective, WINPLUS North America will repair such defect, or replace the product, without charge for parts or labor subject to the following conditions:

1. All repairs must be performed by WINPLUS North America.
2. All warranty claims must be accompanied by a copy of the sales receipt or bill of sale.
3. The equipment must not have been altered or damaged through negligence, accident, improper operation, or failure to follow the product instructions for installation, use, or care.
4. The replacement of parts is excluded from the warranty when replacement is necessary due to normal wear and tear.
5. Repair or replacement parts supplied by WINPLUS North America under this warranty are protected only for the unexpired portion of the original warranty.
6. This is a "repair or replace" warranty only, and does not cover the costs incurred for the installation, removal or reinstallation of the product, or damage to any mobile phone device or vehicle.

OWNER'S RESPONSIBILITIES:

WINPLUS North America will make every effort to provide warranty service within a reasonable period of time. SHOULD YOU HAVE ANY QUESTIONS ABOUT SERVICE RECEIVED OR IF YOU WOULD LIKE ASSISTANCE IN OBTAINING SERVICE, PLEASE CALL TOLL FREE 1.866.294.9244 DURING REGULAR BUSINESS HOURS MONDAY THROUGH FRIDAY 9:00 AM TO 5:00PM.

In order to provide you with the proper warranty service, we request that you adhere to the following procedure:

1. Include a copy of your sales receipt or bill of sale with your unit when it is returned for warranty service.

2. If it is necessary to return your product for service, please return it securely packed, preferably in the original shipping box, and freight and insurance prepaid to the following address:
ATTN: WINPLUS BLUETOOTH® PRODUCTS RETURNS
820 South Wanamaker Avenue,
Ontario, CA 91761
3. Please include a detailed explanation of the problem you are having.
4. If your product is found by WINPLUS North America to have a defect in material or workmanship, within the warranty period, it will be repaired or replaced at no charge and returned to you prepaid.

WINPLUS North America makes no other warranty of any kind aside from the limited express warranty stated herein.

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE YD-V2 SPEAKERPHONE. EXCEPT AS EXPRESSLY SET FORTH HEREIN, WINPLUS NORTH AMERICA AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

WINPLUS North America and/or its affiliates are not responsible for a user's intended or actual use of the YD-V2 Speakerphone. In no event shall WINPLUS North America and/or its affiliates have any liability for any losses (whether direct or indirect, in contract, tort or otherwise) incurred in connection with the YD-V2 Speakerphone. Neither shall WINPLUS North America and/or its affiliates have any liability for any decision, action or inaction taken by any person in reliance on the YD-V2 Speakerphone, or for any delays, inaccuracies and/or errors in connection with the YD-V2 Speakerphone and its functioning.

WINPLUS North America and/or its affiliates shall have no responsibility or liability for damage and/or injury resulting from accidents while user is utilizing the YD-V2 Speakerphone; and WINPLUS North America and/or its affiliates, the manufacturer, distributor and seller shall not be liable for any injury, loss or damage, incidental or consequential, arising out of the use or intended use of the product.

WINPLUS EUROPE **LIMITED WARRANTY**

WINPLUS warrants, to the original purchaser, that its products are free from defects in material and workmanship for 12 months from the date of original purchase. Where permitted by law, WINPLUS liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and WINPLUS makes no other warranty of any kind aside from the limited express warranty stated above.

OWNER'S RESPONSIBILITIES:

In order to provide you with the proper warranty service, we request that you adhere to the following procedure:

1. Include a copy of your sales receipt or bill of sale with your unit when it is returned for warranty service.
2. If it is necessary to return your product for service, please return it securely packed, preferably in the original shipping box, and freight and insurance prepaid to the following address:
ATTN: WINPLUS BLUETOOTH® PRODUCTS RETURNS
Unit 4, Two Counties Estate, Falconer Road
Haverhill, Suffolk CB9 7XZ, UK
3. Please include a detailed explanation of the problem you are having.
4. If your product is found by WINPLUS to have a defect in material or workmanship, within the warranty period, it will be repaired or replaced at no charge and returned to you prepaid.

WINPLUS makes no other warranty of any kind aside from the limited express warranty stated herein.

WINPLUS AUSTRALIA / HONG KONG

LIMITED WARRANTY

This Yada product is warranted against faulty workmanship for a period of 2 years from date of purchase. Liability is limited to replacement of the product and claims for associated or consequential loss or damage will not be accepted. Warranty is void and does not apply if the product has been damaged or rendered faulty by accident, abuse, misuse, incorrect application or if the product has been modified or tampered with. Proof of purchase is required to validate warranty claims. If this product is faulty, simply return it to the place of purchase with your receipt for a replacement product. No refunds or credits will be issued. Replacement is limited to a Yada product of the same or similar model.

PACKAGE CONTENT



Visor Clip



12/24V Car Charger



Bluetooth®
Speakerphone



Rechargeable
AAA Battery x 3



Suction Cup x 2




LCD Caller Display

SPEAKERPHONE VISOR CLIP INSTALLATION

The Speakerphone is equipped with clips to attach to your vehicle's visors. To mount your Speakerphone to your Visor:

- Attached Speakerphone clips to vehicle's sun visor

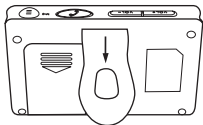


CAUTION: This installation is only an illustration and may not apply to every type of vehicle. For vehicle specific questions, contact your vehicle's manufacturer to be sure that the installation you choose will not degrade the safety of any system or device on your vehicle, including Federal Motor Vehicle Safety Standards.

BATTERY OPERATIONS

IMPORTANT: Before using the Speakerphone:


- Charge the batteries for 6 hours
- Only use rechargeable batteries provided

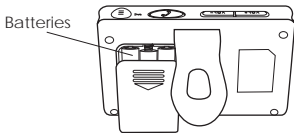

Charge the Hands-Free Speakerphone using 12/24V Vehicle DC Port

Follow the steps below when charging the Speakerphone:

- Plug 12/24V adaptor to vehicle cigarette lighter socket
- Connect adapter to Speakerphone DC Port input
- Verify LED shows a steady red light, indicating device is charging
- Recharge the device for 4 hours to reach full capacity (6 hours if first use)
- Device LED red light will turn off and LED blue light will turn on indicating battery is fully charged

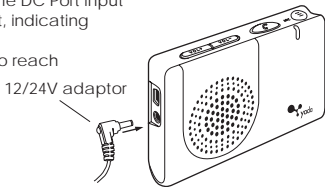

! **IMPORTANT:** Remove device from DC adapter before leaving the vehicle. Do not leave device charging in the vehicle unattended.

NOTE: Actual talk time and standby time for the Speakerphone will vary with different Bluetooth® mobile phones due to different implementation of power down modes.

Low Battery Indicator

Recharge the Speakerphone immediately after the low battery indicators are detected. When battery power is low:

1. The red LED will flash
2. The speakerphone will beep every two minutes

The Speakerphone automatically powers off once batteries are completely consumed. The device will not power back on unless the batteries are sufficiently charged. It may take several minutes before the LED light turns back on once connected for recharging.

LED	Status
Blue 1 x 3 sec.	Ready – can be accessed by paired devices
Blue 1 x 1 sec.	Talking
Blinking Red	Battery low (max. 15 Minutes left)
Red LED on	Under charging
Dimming Red LED	Under charging (dims every 3 seconds when car kit is on)
Blue LED on	Fully charged
Dimming Blue LED	Fully charged (dims every 3 seconds when car kit is on)
Red/Blue Blinking	Pairing-Mode

SPEAKERPHONE OPERATIONS

Power On/Off

To turn Speakerphone on:

- Press and hold "On/Off" for 2 seconds until LED light turns blue
- Listen for a long tone indicating the Speakerphone is powered up
- Blue LED will flash every 3 seconds to indicate device is powered on

To turn Speakerphone off:

- Press and hold "On/Off" for 5 seconds until LED light turns off
- Listen for a long tone indicating the Speakerphone is powered down

The Speakerphone will automatically power off to save battery power if disconnected from the Bluetooth® link for an hour.



Pairing/Linking

Pairing Bluetooth® enabled devices like mobile phones with the Speakerphone authorizes the devices to work with each. This step only needs to be performed once.

Before Pairing the Speakerphone:

- Ensure the Speakerphone is fully charged
- Charging cable is disconnected
- The Speakerphone is turned off (see steps for turning off device)
- You have the pairing instruction of your Bluetooth® wireless phone

It is recommended that you follow the pairing instructions provided by your mobile phone to ensure you successfully pair the Speakerphone with your mobile phone. If you do not have your mobile phone's instruction manual available, follow the typical pairing instructions below:

- Press and hold "On/Off" until device gives a double tone
- LED will flash alternating red and blue light indicating the Speakerphone is in Pairing Mode
- Turn on your mobile phone
- Select setup or connect from your mobile phone menu
- Find and select option to discover Bluetooth® devices, establishing a connection may take several minutes
- If found, phone display should indicate YD-V2 device was detected
- Phone should give you prompt asking if you want to pair the device
- Select "OK" and wait for prompt to enter passkey or PIN
- Enter the code 0000
- Check the Speakerphone LED for a flashing blue light every 3 seconds to verify the pairing was successful
- Do not change the Speakerphone name if the phone gives you a prompt to change the name, accept YD-V2 as the name of the device

Red and Blue light




If the mobile phone failed to detect the Speakerphone and did not successfully pair

- Turn the Speakerphone and phone off, wait for 10 seconds
- Turn phone power on
- Repeat the pairing instructions from the beginning

Establishing Bluetooth® Link:

You will need to establish a link between the Speakerphone and your mobile phone before you can make or receive any calls. Follow instructions provided by your mobile phone to ensure you can establish a successful link. If you do not have your mobile phone operating instructions available, follow the typical steps below:

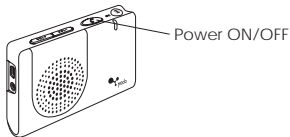

- Press "On/Off"
- Depending on your mobile phone, the link will either be established automatically and the LED status should have a blue light flashing every 3 seconds indicating the device was linked successfully
- Other mobile phones will give you a prompt to accept the link request from the Speakerphone before establishing a link, select Yes or OK if you get a prompt
- If Speakerphone link is disconnected but power is on, press "On/Off" to establish link again

NOTE: If the Speakerphone is used with multiple wireless device or mobile phones, the device reconnects to the last used device.

Dual Mobile Phone Connection

The Speakerphone can be paired and connect with two mobile phones at the same time. To connect two mobile phones:

- Pair mobile phone 1 with Speakerphone (See pairing instructions above)
- Make sure mobile phone is properly paired before pairing mobile phone 2
- Turn off Speakerphone and wait for 2 seconds, then hold "On/Off" to enter pairing mode
- Pair mobile phone 2 with Speakerphone (See pairing instructions above)
- Establish link mobile phone 2 (See linking instructions above)
- Re-Link mobile phone 1


The device will operate with the last connected or activated mobile phone, and automatically switch between each phone.

NOTE: Do not operate Speakerphone while connecting with another mobile phone.

Incoming Calls

To answer calls manually:

- Check if power is on and linked
- Press "On/Off" when incoming call ring is received
- Blue LED light will continue to flash every second while call is in session

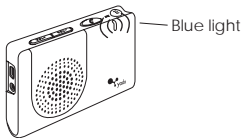

Transferring Calls

The Speakerphone is capable of transferring calls from your mobile phone to the Speakerphone and vice-versa. Follow your mobile phone operating instructions to ensure successful transfer of calls between the Speakerphone and your mobile phone. If instructions are not available, use the typical instructions below to transfer your calls:

- Press "On/Off" to transfer a call from the mobile phone to the Speakerphone
- To transfer from the Speakerphone to the mobile phone while in session, follow instruction from your mobile phone

Reject an incoming call

To reject a call:

- Press and hold "On/Off" for 2 seconds while Speakerphone is ringing
- Call should be dropped once long tone is heard

Call Waiting

To answer another incoming call while already in session:

- Press and hold "Volume -" for 2 seconds
- Speakerphone will place the active call on hold and switch the session to the incoming call
- To return to previous call session, press "Volume -" again for 2 seconds

Outgoing Calls

To make a call using voice activated function:

Verify if the mobile phone voice activated function is properly set and Speakerphone is within range of the mobile phone.

- Press "On/Off" and wait for signal tone
- Say recorded voice command set on your mobile phone (e.g. Call "Name of Person")
- Wait a few seconds for call to connect
- Begin call once connected and answered

To Redial last number called

- Press and hold "Volume -" for 2 seconds until a beep tone is heard indicates redial attempt
- Handset will call the last number dialed

Ending Calls

To end the active call:

- Press "On/Off" to disconnect call and listen for long tone
- LED will show a blue light flashing every 3 seconds indicating the device is in stand-by

Volume

To adjust the Speakerphone volume during a call:

- Press "Volume +" to increase Speakerphone speaker volume
- Press "Volume -" to decrease Speakerphone speaker volume
- Speakerphone will give double tone when maximum or minimum volume is reached

To mute the Speakerphone during an active call:

- Press and hold "Volume +" for 2 seconds
- Speakerphone microphone will be muted until removed
- Speakerphone will give periodic beep tone indicating mute function is active

To un-mute Speakerphone:

- Press and hold "Volume +" for 2 seconds
- Speakerphone disables periodic beep
- Mute function is deactivated and Speakerphone is active again

LCD DISPLAY OPERATIONS

Link operation and its LCD display status

The Speakerphone can be paired and connect with two mobile phones at the same time. To connect two mobile phones:








Step	LCD Display
Pair mobile phone 1 with Speakerphone (See pairing instructions above). Make sure mobile phone is properly paired before pairing with mobile phone 2	The LCD display shows the word "PAIRING" in a large, stylized font. Below the text are four small icons: a mobile phone, a mobile phone, a crossed-out mobile phone, and a speakerphone.
Turn off Speakerphone and wait for 2 seconds, then hold "On/Off" to enter pairing mode (Blue & Red LEDs will flash alternatively indicates the Speakerphone has entered pairing mode)	The LCD display shows the word "OFF" in a large, stylized font. Below the text are four small icons: a mobile phone, a mobile phone, a crossed-out mobile phone, and a speakerphone.
Pair mobile phone 2 with Speakerphone (See pairing instructions above)	The LCD display shows the word "PAIRING" in a large, stylized font. Below the text are four small icons: a mobile phone, a mobile phone, a crossed-out mobile phone, and a speakerphone.
Establish link with mobile phone 2 (See linking instructions above)	The LCD display shows the word "CONNECTING" in a large, stylized font. Below the text are four small icons: a mobile phone, a mobile phone, a crossed-out mobile phone, and a speakerphone.
Re-Link mobile phone 1	The LCD display shows the word "CONNECTING" in a large, stylized font. Below the text are four small icons: a mobile phone, a mobile phone, a crossed-out mobile phone, and a speakerphone.





The device will operate with the last connected or activated mobile phone, and automatically switch between each phone.

NOTE: Do not operate Speakerphone while connecting with another mobile phone.


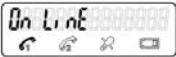 
LCD display general status

Display	Description	LCD Display
READY	Displayed when the Speakerphone is turned on and idle	
PAIRING	Displayed when the Speakerphone is in pairing mode	
CONNECTING	Displayed when the Speakerphone is connecting to the mobile phone	
CONNECTED	Displayed after successfully linking the Speakerphone to the mobile phone	
OFF	Displayed on LCD for a few seconds when Speakerphone is turned off. Displayed with LCD off when Speakerphone is still connected with the power on	







Incoming Calls

Display	Description	LCD Display
RINGING	Displayed when there is an incoming call	
CALLER ID	Displayed when there is an incoming call and number is available NOTE: Some mobile phones may not display Caller ID via this LCD Display Unit	
ON LINE	Displayed when incoming call is answered	
CONNECTED	Displayed if incoming call is rejected and returns to standby state	




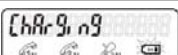 
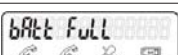 
Outgoing Calls


Display	Description	LCD Display
CALLING	Displayed when making an outgoing call	
ON LINE	Displayed during an active call	

On Line – During Calls

Display	Description	LCD Display
ON LINE	Displayed when talking on an active call	
Vol + / Vol -	Displayed for 2 seconds when Volume Up key or Volume Down key is pressed	
MUTE MICROPHONE	Displayed when mute function is active during a call; stays on until mute function is cancelled	
CALLER ID or CALL WAITING	Displayed when receiving another incoming call while on an existing call NOTES: 1. Some mobile phones may not display "CALL WAITING" or Caller ID via this LCD Display Unit 2. Some phones may not support this feature	 OR CALL WAITING 
CONNECTED	Displayed when call is ended and in standby state	

Battery charging

Display	Description	LCD Display
BATTERY ICON	Displayed when battery power is low	
FLASHING BATTERY ICON	Displayed when recharging while power is on	
NO BATTERY ICON	Battery icon disappears once fully charged during power on	
CHARGING	Displayed when recharging while power is off	
BATT FULL	Displayed when fully charged while power is off	

NOTE: Phone 2 icon will be shown instead if the Speakerphone is operating with mobile phone 2. 

VOICE OVER INTERNET PROTOCOL (VOIP) APPLICATION

The Speakerphone can be used with desktop or laptop computer that are Bluetooth® compatible, to make call via Voice Over Internet Protocols (VOIP). To use this function, follow the instructions below:

NOTE: If your computer does not have built-in Bluetooth® capability, you will need to install a Bluetooth® USB Adapter to utilize the Speakerphone. Follow instruction for installing adapter in your computer:

- Download from the corresponding websites and install Skype, MSN messenger, Netmeeting, Yahoo messenger, or ICQ application software in the PC
- Pair Speakerphone with Computer:
 - o Follow pairing instruction of Speakerphone to set the Speakerphone into pairing mode
 - o Start the computer Bluetooth® software and pair with the Speakerphone
If computer prompts for a Speakerphone passkey enter "0000"
- Connecting and Disconnecting:
 - o Press the "On/Off" to connect the Speakerphone with the computer
 - o Press "On/Off" again to disconnect
- Testing the Bluetooth® Link:
 - o After PC connects with the Speakerphone, the PC audio will be automatically routed to the "Bluetooth Audio" driver
 - o Play some music on the PC by Windows Media Player or other music application
 - o You should be able to hear the music on the Speakerphone
 - o If you can't hear it, then go to "control Panel"-> "Sound and Audio Device Properties"-> "Audio"-> "Sound playback" select the "Bluetooth Audio" to activate the link.

- Now you can start using the VOIP application and talk to your friend through your Speakerphone wirelessly and freely
- Please follow the steps from Speakerphone Pairing & Linking to connect the Speakerphone back to your Bluetooth® mobile phone

CUSTOMER SERVICE / CONTACT US PAGE

For questions or issues regarding the product, please visit www.letsyada.com or contact Winplus in your area/region to speak to our customer service representative:

Winplus USA	Tel. 866-294-9244
	Tel. 310-638-0588
Winplus Europe	Tel. 44-1440-713888
Winplus Australia	Tel. 61-3-9720-4143
Winplus New Zealand	Tel. 64-9-5254575
Winplus Asia	Tel. 852-2798-8932

You can also contact us online by visiting www.winplus.com for more information about the product.

IF YOU ARE EXPERIENCING ANY ISSUES WITH THE PRODUCT DURING OPERATION, DO NOT RETURN THE PRODUCT TO THE STORE. CONTACT WINPLUS DIRECTLY FOR INSTRUCTIONS ON HOW TO RETURN/EXCHANGE THE PRODUCT.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC statement

Operation is subject to the following two conditions:

- 1) This device may not cause interference and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device has been designed to operate with an antenna having a maximum gain of 0 dBi. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

IMPORTANT NOTE:**IC Radiation Exposure Statement:**

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



WINPLUS

NORTH AMERICA	820 South Wanamaker Avenue Ontario, CA 91761	Tel: 310-638-0588 Fax: 310-496-2740
EUROPE	Unit 4, Two Counties Estate, Falconer Road, Haverhill, Suffolk CB9 7XZ, U.K.	Tel: 44-1440-713888 Fax: 44-1440-713889
AUSTRALIA	Unit 2, 991 Mountain Hwy Boronia, Victoria, Australia, 3155	Tel: 61-3-9720-4143 Fax: 61-3-9720-4165
NEW ZEALAND	22-24 Olive Road, Penrose, Auckland, New Zealand	Tel: 64-9-5254575 Fax: 64-9-5256817
ASIA	Suites 6-11, 7th Floor, Corporation Park, 11 On Lai Street, Shatin, N.T., Hong Kong	Tel: 852-2798-8932 Fax: 852-2795-0241

© 2009 Winplus North America Inc. All Rights Reserved. Winplus, the logo design, and yada are trademarks or registered trademarks of Winplus North America Inc. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Winplus North America Inc. is under license.